

your eKids product.

Distributed by eKids, LLC

For questions or comments please call our toll-free  
number: 1-888-TOP-TOYS

Also visit our website: [www.ekids.com](http://www.ekids.com)

1299 Main Street Rahway, NJ 07065

B52EXIB-071723-A

Printed in the Philippines



Model: B52 Series



## Wireless Headphones


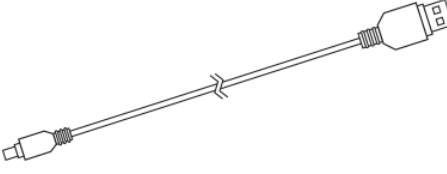 
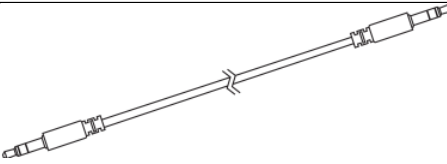 
Charge Before Use

### Introduction

Your new Bluetooth stereo headphones are designed to link with your Bluetooth enabled smartphone or music player to allow you to wirelessly listen to music and answer phone calls within the normal 10 meter (33 feet) Bluetooth operating range.

Please review this manual carefully to make sure you are getting the maximum benefit from all of the features of your new headphones, and keep this manual for future reference.

## What's Included

B52 Headphones	USB Charging Cable
	
	<p data-bbox="541 444 976 483"><b>Detachable Audio Cable</b></p> 

The AUX jack allows you to use your Bluetooth headphones as normal headphones so that you can listen to music on any non-Bluetooth device that is equipped with a 3.5mm headphone jack. Connect the included audio cable to the AUX jack on the right earcup of your headphones, and to the headphone jack of your auxiliary music source. Your headphones should be in the Power "Off" mode. Use the volume and track navigation controls on your music player as you would with any normal headphones.

heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will eKids or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, eKids will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service. If service is required, please call Customer Service at 1-888-TOP-TOYS to obtain a Return Authorization Number and shipping instructions. A copy of the sales receipt is required to validate in-warranty coverage.

### Disclaimer of Warranty

**Note:** This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive

## Preparation For Use

### 1. Controls and Indicators

1	Volume Up / Skip Forward Button	
2	Volume Down / Skip Back Button	
3	Power / Pairing / Charging LED Indicators	
4	Power / Play / Pause Button	
5	USB Charging Port	
6	AUX Jack	
7	Microphone	

### 2. Charging Your Headphones

Your Bluetooth headphones operate on a built-in rechargeable battery. Although the battery was fully charged when it left our factory, the battery can lose power even during periods of non-use.

**Make sure to charge the battery before using the headphones for the first time.**

**To charge the battery connect the larger plug of the included USB charging cable to the powered USB port of a computer or a USB/AC adapter, and then connect the smaller plug to the USB charging port on the side of the right ear cup.**

**The Charging Indicator will glow red while the headphones are charging. The indicator will turn off when the headphones are fully charged and ready to use.**

**When fully charged the battery should provide up to 24 hours of talk time or music playing time at a normal listening level. If operated at maximum volume the music playing time will be reduced.**

**Note: While charging, the headphone power will turn off to conserve battery power and minimize charging time.**

**radio/TV technician for help.**

**This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:**

- 1. This device may not cause interference.**
- 2. This device must accept any interference, including interference that may cause undesired operation of the device.**

**The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.**

**CAN ICES-3 (B)/NMB-3(B)**

 
**Limited One-Year Warranty Information**

**eKids warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase.**

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced

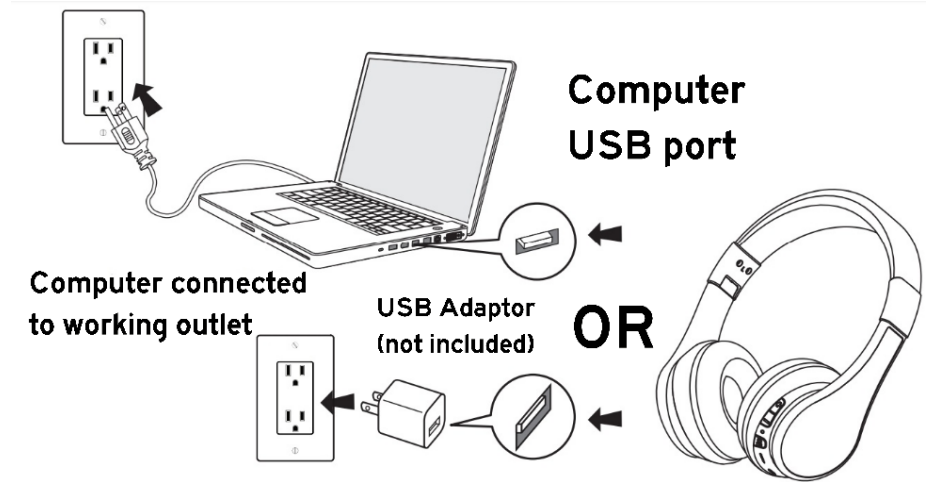

## Operating Instructions

### 1. First Time Power On: Auto Pairing

The first time you power on the headphones, Press and Hold the Power/Play/Pause Button on the right earcup for about 3 seconds until the LED flashes. The first time the headphones are powered on they will enter auto-pairing mode, indicated by flashing red and blue LEDs.

a) Make sure Bluetooth is enabled on your device (check in Settings or Options).

b) "ekids B52" will appear on your device's Bluetooth menu.

c) Select "ekids B52" to complete pairing.

**Note:** If your Bluetooth device asks for a Password or a PIN to complete the pairing process, enter “0000” on the keypad of your device. You are now ready to begin streaming music wirelessly from your Bluetooth device to your Bluetooth headphones.

## **2. Standard Power On: Auto-Linking Mode**

After the first time, whenever you power on the headphones, the blue LED will flash slowly indicating that your headphones are in Auto-Linking Mode (trying to re-link to a previously paired device) that is within the normal pairing range of about 33-feet. If your headphones do not find a previously paired device that is in range, the LEDs will start flashing red and blue (for new device pairing) and then the power will shut off in 3 minutes if no device is connected (to save the battery life).

## **3. Manually Pairing Your Headphones With Your Bluetooth Device**

**Note:** Your headphones must be ‘Off’ to begin the manual pairing process. With the headphones in

	<b>Headphones will shut off automatically if no music plays for 60 minutes.</b>
--	---

## **FCC/IC Information (FCC ID: EMOB52A IC: 986B-B52A HVIN: B52a)**

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.operation of the device.

- **Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.
- **Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

<b>incoming phone call</b>	<b>Power/Play/Pause Button for 3 seconds to decline the incoming call.</b>
<b>End a call</b>	<b>Short press the Power/Play/Pause Button to end the call and 'hang up'.</b>
<b>Transfer a call between the phone and the headphones</b>	<b>While the call is in progress, press and hold the Power/Play/Pause Button for 2 seconds. You will hear a beep indicating to transfer the call.</b>
<b>Last number redial</b>	<b>When no call is in progress, double press Power/Play/Pause Button to redial the last number.</b>
<b>Reset Bluetooth/Clear all paired devices</b>	<b>Press and hold the Volume Up/Skip Forward button for 5 seconds during pairing mode.</b>
<b>Turn headphones Off</b>	<b>Press and hold Power/Play/Pause button for 5 seconds until the LED indicator turns red and then shuts off.</b>

**'Off' mode, Press and Hold the Power/Play/Pause Button on the right earcup for about 7 seconds, the LEDs will flash red and blue. Release the Power/Play/Pause Button. Follow the a-c pairing instructions in Step 1 above to complete pairing.**

#### **4. Power Off**

**To turn the headphones 'Off' at any time, Press and Hold the Power/Play/Pause Button on the right earcup for about 5 seconds. The LED will turn red and then the power shuts off. The headphones will shut off automatically if no music plays for 60 minutes.**

#### **5. Using Your Bluetooth Headphones**

**The following chart explains the basic functions and operations of your Bluetooth headphones.**

<b>Function</b>	<b>Action Required</b>
<b>Turn headphones On</b>	<b>When headphones are 'Off', press and hold the Power/Play/Pause Button for 3 seconds until the LED indicator flashes blue.</b>

<b>Enter Pairing Mode</b>	When headphones are 'Off', press and hold the <b>Power/Play/Pause Button</b> for 7 seconds until the LED indicator alternately flashing red and blue.
<b>Pairing</b>	Make sure your Bluetooth device is 'On' and discoverable. When "eKids B52" appears on your device's menu, select it to complete pairing.
<b>Play / Pause</b>	Short press the <b>Power/Play/Pause Button</b> to start playback. Short press to pause playback. Short press to resume playback.
<b>Skip to next track</b>	Press the <b>Volume Up/Skip Forward</b> button twice during playback.
<b>Skip to beginning of current track</b>	Press the <b>Volume Down/Skip Back</b> button twice during track playing after 5 seconds.

<b>Skip to beginning of previous track</b>	Press the <b>Volume Down/Skip Back</b> button twice in the track playing the beginning 5 seconds.
<b>Increase volume</b>	Press the <b>Volume Up/Skip Forward</b> button during playback (hold for rapid setting)
<b>Decrease volume</b>	Press the <b>Volume Down/Skip Back</b> button during playback (hold for rapid setting)
<b>Answer an incoming phone call</b>	Short press the <b>Power/Play/Pause Button</b> when you hear the incoming ring sound.  Note: Music will automatically pause when you are answering a call and resume when you end the call.
<b>Siri/Google Voice</b>	Press and hold the <b>Power/Play/Pause Button</b> for 2 -3 seconds.
<b>Decline an</b>	Press and hold the