

Mew Mew Amiche Vincenti

Cristina D'Avena

Scan this QR Code to play this song.



This song is brought to you by:



Model: B64 Series



Wireless Headphones with EZ Link

Charge Before Use

FCC Information (FCC ID: EMOB64A IC: 986B-B64A HVIN: B64a)

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- **Warning: Changes or modifications to this unit not expressly approved by the party**

responsible for compliance could void the user's authority to operate the equipment.

- **Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.**

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- **Reorient or relocate the receiving antenna.**

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ISED statements (CAN ICES-3 (B) / NMB-3(B))

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.**
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.**

This device comply with ISED RF exposure requirement, users can obtain Canadian information on RF exposure and compliance.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Cet équipement est conforme aux limites d'exposition aux radiations IC CNR-102 établies pour un environnement non contrôlé.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;**
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.**

L'appareil est conforme aux exigences d'exposition RF ISED, les utilisateurs peuvent

Percorrendo la gioventù

Mew Mew amiche vincenti

Mew Mew amiche vincenti

Ma in questa prova non sei da sola

Cinque amiche brillanti e vincenti

Dai colori vivaci e splendenti

Mew e ancora Mew

Me le fusa le fai sempre e solo tu

Che gruppo, tante amiche tutte belle e vincenti

Con sembianze così sorprendenti

Mew e ancora Mew

Sguardi furbi e sorridenti per di più

Lottate contro il male

Grande rivale della legge universale

Cinque amiche sicure e vincenti

Dalle armi speciali e potenti

Mew e ancora Mew




 

Miagolando arriverai laggiù

24

obtenir des informations canadiennes sur l'exposition aux RF et la conformité.

Tout changement ou modification non expressément approuvé par la partie responsable de la conformité pourrait annuler le droit de l'utilisateur à utiliser l'équipement.

What's Included

B64 Headphones		
Disney Princess	Frozen	Encanto
		
USB Charging Cable		
		
Detachable Audio Cable		
		

5

The AUX jack allows you to listen to music on any non-Bluetooth device that is equipped with a 3.5mm headphone jack. Connect the included audio cable to the AUX jack on the right earcup of your headphones, and to the headphone jack of your auxiliary music source. Your headphones should be in the Power "Off" mode.

Use the volume and track navigation controls on your music player as you would with any wired headphones.

Charging Your Headphones

Your Bluetooth headphones operate on a built-in rechargeable battery. Make sure to charge the battery before using the headphones for the first time.

To charge the battery, connect the larger plug of the included USB charging cable to the powered USB port of a computer or a USB/AC adapter, and then connect the smaller plug to the USB charging port on the side of the right ear cup.

The Charging Indicator will glow red while the headphones are charging. The indicator will turn

Cinque amiche sicure e vincenti

Dalle armi speciali e potenti

Mew e ancora Mew

Miagolando arriverai laggiù

Percorrendo la gioventù

Mew Mew amiche vincenti

Mew Mew amiche vincenti

Sfumano tutte le verità

E poi scopri nuove realtà

Se il destino all'improvviso cambia il tuo DNA

Dimmi un po' chi sei

Non sei più la stessa e tu lo sai

Hai corretto il copyright, ma chi sei?

Non sei più la stessa e adesso puoi

Trasformarti quando vuoi

 
Non sei più la stessa e tu lo sai
Hai corretto il copyright, ma chi sei?
Non sei più la stessa e adesso puoi
Trasformarti quando vuoi
Ma in questa prova non sei da sola

Cinque amiche brillanti e vincenti
Dai colori vivaci e splendenti
Mew e ancora Mew
Me le fusa le fai sempre e solo tu
Che gruppo, tante amiche tutte belle e vincenti
Con sembianze così sorprendenti
Mew e ancora Mew
Sguardi furbi e sorridenti per di più

Lottate contro il male
Grande rivale della legge universale

off when the headphones are fully charged and ready to use.

When fully charged the battery should provide up to 24 hours of continuous play at a normal listening level. If operated at maximum volume the music playing time will be reduced.

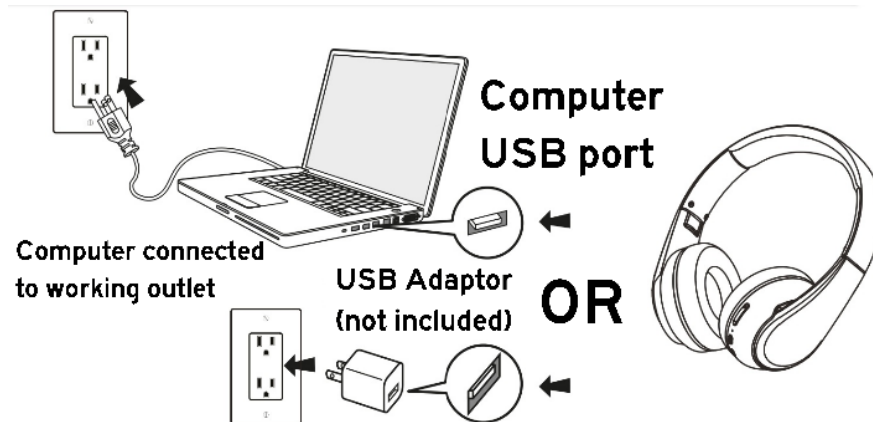

 
Note: While charging, the headphone power will turn off to conserve battery power and minimize charging time.

Internal Rechargeable Lithium-ion Battery

This device uses an internal rechargeable lithium-ion battery that should last the lifetime of the device. If you suspect your battery may be dead, try charging it several times. If problems persist,

please do not attempt to repair unit; see warranty for factory service.

Controls & Indicators

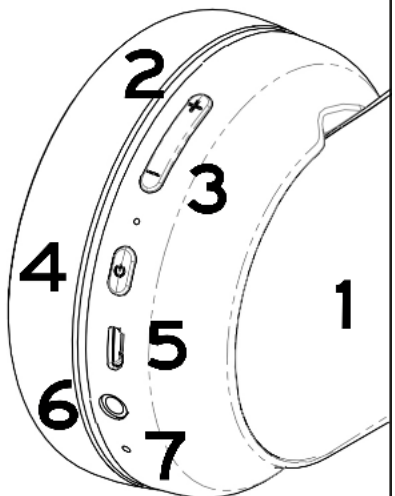1	EZ Link Button	
2	Volume Up / Next Track	
3	Volume Down / Previous Track	
4	Power / Pair / Phone / Play / Pause	
5	USB Charging Port	
6	AUX Jack	
7	Microphone	

Connecting to Bluetooth

1. First Time Power On: Auto Pairing

The first time you power on the headphones, Press and Hold the Power/Play/Pause Button on

Mew Mew Amiche Vincenti

Cristina D'Avena

Mew Mew amiche vincenti

Mew Mew amiche vincenti

I giorni corrono e passano

E le storie non cambiano

È una spola tra casa e scuola

Ma fermarsi non si può

Sogni qualcosa, una novità

Per non essere sempre là

E il destino all'improvviso cambia il tuo DNA

Dimmi un po' chi sei

agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your eKids product.

Distributed by eKids, LLC

For questions or comments please visit our website: www.ekids.com

1299 Main Street Rahway, NJ 07065

B64-03192024-A

Printed in the Philippines

the right earcup for about 3 seconds until the LED flashes. The first time the headphones are powered on they will enter auto-pairing mode, indicated by flashing red and blue LEDs.

a) Make sure Bluetooth is enabled on your device (check in Settings or Options).

b) Using your Bluetooth device, select the Bluetooth pairing name for your product:

- For Disney Princess: "EZ-Link B64DP"

- For Frozen: "EZ-Link B64FR"

- For Encanto: "EZ-Link B64EN"

c) Note: If your Bluetooth device asks for a Password or a PIN to complete the pairing process, enter "0000" on the keypad of your device. You are now ready to begin streaming music wirelessly from your Bluetooth device to your Bluetooth headphones.

2. Standard Power On: Auto-Linking Mode

After the first time, whenever you power on the headphones, the blue LED will flash slowly

indicating that your headphones are in Auto-Linking Mode (trying to re-link to a previously paired device) that is within the normal pairing range of about 33-feet. If your headphones do not find a previously paired device that is in range, the LEDs will start flashing red and blue (for new device pairing) and then the power will shut off in 3 minutes if no device is connected (to save the battery life).

3. Manually Pairing Your Headphones With Your Bluetooth Device

Note: Your headphones must be 'Off' to begin the manual pairing process. With the headphones in 'Off' mode, Press and Hold the Power/Play/Pause Button on the right earcup for about 7 seconds, the LEDs will flash red and blue. Release the Power/Play/Pause Button. Follow the a-c pairing instructions in Step 1 above to complete pairing.



Installing EZ Link Setup App

Use the EZ Link Setup app to access your favorite Disney playlists on a

Center authorized by Customer Service. If service is required, please contact Customer Service at www.ekids.com/support to obtain a Return Authorization Number and shipping instructions. A copy of the sales receipt is required to validate in-warranty coverage.

Disclaimer of Warranty

Note: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner. This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will eKids or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or

C (41° - 95° Fahrenheit) before you charge the battery. Leakage or deterioration of the battery may occur if this warning is not heeded. Never expose the battery to any liquid. Never expose the battery to excessive heat such as direct sunlight or fire. Never use the battery pack in an unventilated vehicle where excessive internal temperatures may be encountered. Always keep the battery out of the reach of infants and small children.

Limited One-Year Warranty Information

eKids warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase. Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, eKids will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service

variety of different music streaming services. This function will need to be activated before use.

To set up the app:

- **Download the free EZ Link Setup app from the Apple Store or Google Play, and install it on your Bluetooth-enabled iOS or Android device.**
- **Make sure your Bluetooth device is powered on and connected to the headphones.**
- **Follow the prompts in the EZ Link Setup app to choose a preferred music streaming service, and complete setup.**
- **Keep the EZ Link Setup app open and running on your Bluetooth enabled device to use the EZ Link feature seamlessly.**

Using EZ Link Button

Once the app is enabled, use the EZ Link Button on the headphones to access Disney playlists:

- **Press the EZ Link Button once to connect to your selected streaming service, and enjoy a**

custom Disney playlist themed to your product.

- Press and hold the EZ Link Button to connect to the Disney Hits playlists, and enjoy even more great music!

Note: Product must be paired to an iOS or Android device that is running the EZ Link Setup app. It may take a few seconds to connect to your streaming service and playlist. Some streaming services require you to press 'Play' on your Bluetooth device. No user information is gathered when using the app.

App Troubleshooting

If you press the EZ Link Button, but a playlist does not open:

- Confirm your Bluetooth device is connected to the headphones.
- Make sure the EZ Link Setup app is installed and running on your 'unlocked' Bluetooth device.
- Make sure the EZ Link Button is enabled (via EZ Link Setup app).

Press + hold	Connect to Disney Hits playlist
--------------	---------------------------------

Warning/Disposal Of Unit

Please do NOT attempt to change the battery yourself. Doing so may damage the unit and will void your warranty. Never dispose of used batteries/electronics with ordinary solid wastes, since they contain toxic substances. Always dispose of used batteries/electronics in accordance with the prevailing community regulations. Many electronics retailers now recycle batteries and other electronic components at no charge. To find a drop-off location near you, visit www.call2recycle.com

Caution

The battery used in this device may present a risk of fire, explosion or chemical burn if mistreated. Never use or charge the battery if it appears to be leaking, discolored, deformed, or in any way abnormal. Never disassemble the unit or attempt to remove battery as that could cause leakage of alkaline solution or other electrolytic substance. Always confirm that the temperature is 5°C - 35°C

Last number redial	When no call is in progress, double press Power/Play/Pause button to redial the last number.
Siri/Google Assistant	Press and hold the Power/Play/Pause button for 2-3 seconds.
Reset Bluetooth/Clear all paired devices	Press and hold the Volume Up/Next Track for 5 seconds during pairing mode.
Turn headphones Off	Press and hold Power/Play/Pause button for 5 seconds until the LED indicator turns red and then shuts off. Headphones will shut off automatically if no music plays for 60 minutes.
EZ Link Button - Basic Functions (Use EZ Link Setup App to activate this feature)	
Short Press	Connect to a custom Disney playlist

For additional information about the EZ Link feature and app, please scan the QR code to match your product:

Disney Princess	Frozen	Encanto
		

The following chart explains the basic functions of your Bluetooth headphones:

Function	Action Required
Turn headphones On	When headphones are 'Off', press and hold the Power/Play/Pause Button for 3 seconds until the LED indicator flashes blue.
Enter Pairing Mode	When headphones are 'Off', press and hold the Power/Play/Pause Button for 7 seconds until the LED indicator

	alternately flashing red and blue.
Pairing	Make sure your Bluetooth device is 'On' and discoverable. On your device's Bluetooth menu, select your product to complete pairing
Play / Pause	Short press the Power/Play/Pause Button to start playback. Short press to pause playback. Short press to resume playback.
Skip to next track	Press the Volume Up/Next Track button twice during playback.
Skip to beginning of current track	Press the Volume Down/Previous Track button twice during track playing after 5 seconds.
Skip to beginning of previous track	Press the Volume Down/Previous Track button twice in the track playing the beginning 5 seconds.

Increase volume	Press the Volume Up/Next Track button during playback (hold for rapid setting)
Decrease volume	Press the Volume Down/Previous Track button during playback (hold for rapid setting)
Answer an incoming phone call	Short press the Power/Play/Pause Button when you hear the incoming ring sound. Note: Music will automatically pause when you are answering a call and resume when you end the call.
End a call	Short press the Power/Play/Pause Button to end the call and 'hang up'.
Transfer a call between the phone and the headphones	While the call is in progress, press and hold the Power/Play/Pause Button for 2 seconds.